


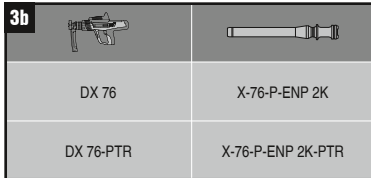
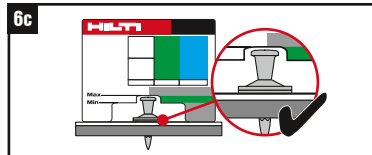
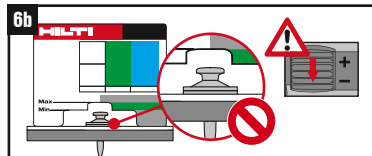
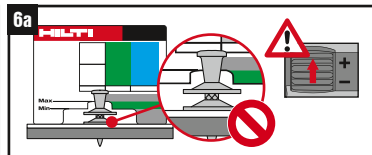
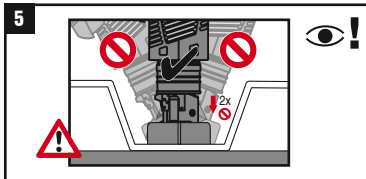
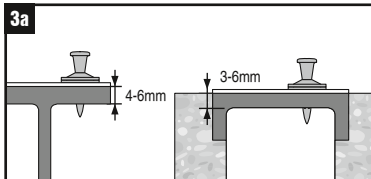
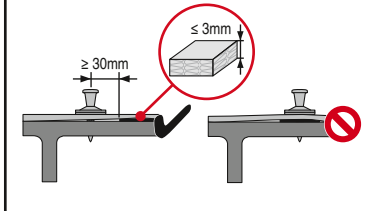


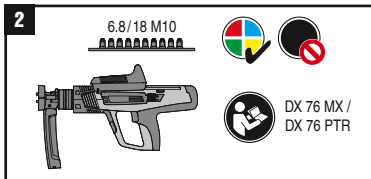

Hilti Corrosion handbook / DFTM

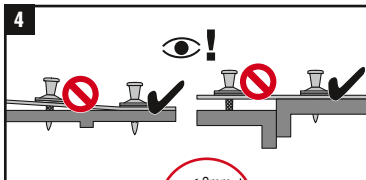

DX 76	X-76-P-ENP 2K	MX 76	X-ENP 2K-20 L15 MX
		X-76-F-15	X-ENP 2K-20 L15
		MX 76-PTR	X-ENP 2K-20 L15 MX
		X-76-F-15-PTR	X-ENP 2K-20 L15

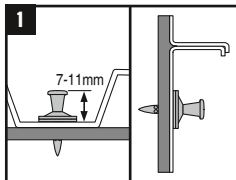